

LS-100TS

CALCULATOR /
KALKULATOR



E-IM-2953

INSTRUCTIONS **EN**
INSTRUKSI **IN**

Calculation Examples / Contoh Kalkulasi

CALCULATION / PERHITUNGAN 	OPERATION / OPERASI / 	DISPLAY/ TAMPILA [234567890]
Mixed / Campuran		
140-35+22=127 2x 2 =3-6 -7x9 0 =-63 (2+4)+3x8.1=16.2	ON 140 35 + 22 = (0) 127. 2 x 2 2 3 3 = 6. 7 7 x 99 99 0 = -63. 2 + 4 4 3 3 x 8.1 = 16.2.	(0.) (127.) (6.) (-63.) (16.2)
Constant / Konstan		
2+3=5 4+3=7 1-2=-1 2-2=0 2x3=6 2x4=8 6÷3=2 9÷3=3	2 + 3 = 4 = 1 - 2 2 - 2 2 x 3 4 = 6 ÷ 3 9 ÷ 3	(5.) (7.) (-1.) (0.) (6.) (8.) (2.) (3.)
Power, Fraction / Pangkat, Pecahan		
3 ⁴ =81 1/5=0.2 1/(2x3+4)=0.1	3 x 4 = 5 ÷ = 2 x 3 + 4 =	(81.) (0.2) (0.1)
Square Root / Akar Kuadrat		
$\sqrt{3} = 1.732050807$	3 	(1.732050807)
Percentage / Persen		
1200× $\frac{12}{100}$ =144 1200× $\frac{15}{100}$ =180 1200+(1200×20%)=1,440 1200-(1200×20%)=960	1200 x 12 $\frac{\%}{\text{}} \text{ button}$ (144. 15 $\frac{\%}{\text{ button}}$ (180. 1200 + 20 $\frac{\%}{\text{ button}}$ (1'440. 1200 - 20 $\frac{\%}{\text{ button}}$ (960.)	(144.) (180.) (1'440.) (960.)
Memory / Memori		
$3 \times 4 = 12$ $- 6 + 0.2 = 30$ $- 18$ $+ 200$ 182	 3 x 4 = 6 + 0.2 = - 18 = 200 = 182 = (Recall memory/ Panggil balik) (Clear memory/ Hapus memori)	(0.) (12.) (30.) (-18.) (200.) (182.) (182.)

CALCULATION / PERHITUNGAN 	OPERATION / OPERASI / 	DISPLAY/ TAMPILA [234567890]
Tax Calculation / Kalkulasi Pajak	BUSINESS TAX	(TAX% 5.)
Tax Rate Set Tax Rate = 5%	5 RATE TAX+	(TAX% 5.)
Recall Tax Rate	RATE TAX-	(TAX% 5.)
Add the Tax Amount Price \$2,000 with out tax Selling price with tax=?(\$2,100) Tax amount =? (\$100)	2000 TAX+ TAX+	(2'000.) (TAX+ 2'100.) (TAX100.)
Deduct Tax Amount Selling price \$3,150 with tax Price without tax=? (\$3,000) Tax amount =? (\$150)	3150 TAX- TAX-	(3'150.) (TAX- 3'000.) (TAX 150.)
Business / Bisnis	BUSINESS TAX	
Calculating Cost Selling Price : \$1,500 Profit Margin : 30% Cost =? (\$1,050)	1500 SELL MARGIN	(COST 1'500.) (COST 1'050.)
Calculating Selling Price Cost : \$2,000 Profit Margin : 20% Selling Price=? (\$2,500)	2000 COST MARGIN	(SELL 2'000.) (SELL 2'500.)
Calculating Profit Margin Cost : \$1,500 Selling Price : \$2,000 Profit Margin =? (25%)	1500 COST 2000 SELL	(COST 1'500.) (MARGIN% 25.)
Overflow / Limpah Atas		
1) 1234567x78900 =97407336300 (ERROR)	1234567 x 78900 =	(9.740733630) (9.740733630)
2) 9999999999 (Add to Memory) 123 (Add to Memory)	9999999999 M ₉ 123 M ₁₂₃	(M ₉ 9999999999) (M ₁₂₃ 1.0000000012) (M ₁₂₃ 1.0000000012) (M ₉ 9999999999)
3) 6=0=0 (ERROR)	6 = 0 (ERROR)	(0.) (0.)
4) 9999999999 (e.g. Tax rate 5%)	9999999999 TAX+ M ₉ 10.4999999999 TAX- M _{10.4999999999}	(9.9999999999) (1.0499999999) (1.0499999999)

CANON ELECTRONIC BUSINESS MACHINES (H.K.) CO., LTD.

17/F., Tower One, Ever Gain Plaza, 82-100 Container Port Road, Kwai Chung, New Territories, Hong Kong

CANON AUSTRALIA PTY. LTD.

Building A, The Park Estate, 5 Talavera Road, Macquarie Park, NSW 2113, Australia
Tel: 13 13 83 Website: www.canon.com.au

CANON NEW ZEALAND LTD.

Akoranga Business Park, 28 The Warehouse Way, Northcote, Auckland 0627, New Zealand
Tel: 0800 222 666 Website: www.canon.co.nz

CANON MARKETING (MALAYSIA) SDN BHD.

Block D, Peremba Square, Saujana Resort, Section U2, 40150 Shah Alam, Selangor Darul Ehsan, Malaysia

POWER SUPPLY

This calculator comes with a dual power source. The duration of alkaline battery depends entirely on individual usage.
(Note: Do not attempt to change the battery by yourself. Have a Canon Service Center change the battery for you.)

AUTOMATIC POWER-OFF FUNCTION

When the power is turned "ON" and none of the keys are pressed for more than 7 minutes, the calculator turns off automatically to save power. Press **ON/OFF** key to restart the calculator. "0" will appear on the display.

- !** Electromagnetic interference or electrostatic discharge may cause the display to malfunction or the contents of the memory to be lost or altered. Should this occur, use the tip of a ball point pen (or similar sharp object) to press the [RESET] button on the back of the calculator. After resetting, be sure to set the tax rate again.

**KEY INDEX**

- ON/OFF** Power On/Clear Indicator and Clear Key – Used for turning the calculator on. Press once to clear last entered value. Press again to clear all entered values, except memory. This key is also used for clearing the overflow error.
- EC** Sign Change Key – Used for changing the sign (+ or -) of the displayed numbers.
- Right Shift Key – Used for shifting and correcting an entered numeral. A single press deletes the last digit on the right.
- ✓** Square Root Key – Used for performing square root calculations.
- %±** Percent Plus-Minus Key – Used for performing percentage, add-on and discount calculations.
- R/M CM** Recall/Clear Memory Key – A double function key. Press once to recall the memory contents. Press the key successively to clear the memory contents.
- M±** Memory Plus Equal Key – Used for obtaining a calculation result and adding the result automatically to the memory. This key is also used for adding number to the memory.
- M=** Memory Minus Equal Key – Used for obtaining a calculation result and subtracting the result automatically from the memory. This key is also used for subtracting a number from the memory.

BUSINESS SALES CALCULATION

Set the switch to "BUSINESS" to perform cost, sell and profit margin calculation.

- COST** – Used for calculating the cost, selling price and profit margin amount. Enter the value of any 2 items to obtain the balance value item. (e.g. enter the value of the cost and the selling price to obtain the profit margin.)

TAX CALCULATION

Set the switch to "TAX" to perform tax calculation.

- RATE TAX +** Store the Tax Rate – Enter the tax rate figure, then press **RATE TAX +** to store.
- RATE TAX -** Recall the Tax Rate – Press **RATE TAX -** to recall the current tax rate.
- TAX +** Add Tax Key – Used for adding the tax amount to the displayed figure.
- TAX -** Deduct Tax Key – Used for deducting the tax amount from the displayed figure.

SPECIFICATION

Power Source: Solar cell and Alkaline battery (LR44 X 1)
 Usable Temperature: 0°C to 40°C
 Dimensions: 103mm (W) x 135mm (L) x 32mm (H)
 Weight: 102g
 (Subject to change without notice)

CATU DAYA

Kalkulator ini dilengkapi dengan dua buah sumber daya. Umur baterai hanya tergantung pada penggunaan masing-masing.
(CATATAN: Jangan mencoba mengganti baterai sendiri. Mintalah bantuan Canon Service Center untuk mengganti baterai untuk Anda).

FUNGSI CATU DAYA MATI OTOMATIS

Apabila catu daya "DIHIDUPKAN" dan tidak ada tombol yang ditekan lebih dari 7 menit, kalkulator secara otomatis mati untuk menghemat daya. Tekan tombol **ON/OFF** untuk melakukan kalkulasi.

- !** Interferensi elektromagnetik atau sengatan listrik dapat menyebabkan layar untuk kerusakan atau isi memori yang akan hilang atau berubah. Jika hal ini terjadi, gunakan ujung titik bola pena (atau benda tajam sejenis) untuk menekan [RESET] tombol di bagian belakang kalkulator. Setelah ulang, pastikan untuk mengatur tarif pajak lagi.

**INDEKS KUNCI**

- ON/OFF** Power On Indicator / Clear dan Clear Key – Digunakan untuk mengubah kalkulator pada. Teken sekali untuk menghapus nilai terakhir yang dimasukkan. Tekan lagi untuk menghapus semua nilai yang dimasukkan, kecuali memori. Tombol ini juga digunakan untuk membersihkan kesalahan overflow.
- EC** Masuk Ubah Key – gunakan untuk mengubah tanda (+ atau -) dari nomor yang ditampilkan.
- Kunci Shift kanan – Digunakan untuk memindahkan dan mengoreksi angka yang dimasukkan. Sebuah tekan tunggal menghapus digit terakhir di sebelah kanan.
- ✓** Square Root Key – Digunakan untuk melakukan perhitungan akar kuadrat.
- %±** Plus-Minus persen Key – Digunakan untuk melakukan persentase, add-on dan perhitungan diskon.
- R/M CM** Ingat / Clear Memory Key – Sebuah tombol fungsi ganda. Teken sekali untuk mengingat isi memori. Tekan tombol berturut-turut untuk menghapus isi memori.
- M±** Memory Ditambah Equal Key – Digunakan untuk memperoleh hasil perhitungan dan menambahkan hasilnya secara otomatis ke memori. Tombol ini juga digunakan untuk menambahkan nomor ke memori.
- M=** Memory Minus Equal Key – Digunakan untuk memperoleh hasil perhitungan dan mengurangkan hasil otomatis dari memori. Tombol ini juga digunakan untuk mengurangi nomor dari memori.

KALKULASI PENJUALAN BISNIS

Mengatur berilah ke "BISNIS" untuk melakukan biaya, menjual dan perhitungan margin keuntungan.

- COST** – Digunakan untuk menghitung biaya, harga jual dan jumlah margin keuntungan. Masukkan nilai dari 2 item untuk mendapatkan selisih antara kedua nilai tersebut. (Contohnya masukkan nilai biaya dan harga jual untuk mendapatkan % margin keuntungan.)

FUNGSI KALKULASI PAJAK

Mengatur berilah ke "PAJAK" untuk melakukan perhitungan pajak.

- RATE TAX +** Menyimpan Tarif Pajak – Masukkan nilai pajak dan tekan **RATE TAX +** untuk menyimpan tarif pajak.
- RATE TAX -** Memanggil Kembali Tarif Pajak – Tekan **RATE TAX -** untuk memanggil kembali tarif pajak saat ini.
- TAX +** Tombol Add Tax – Digunakan untuk menambahkan jumlah pajak pada angka yang ditampilkan.
- TAX -** Tombol Deduct Tax – Digunakan untuk memotong jumlah pajak pada angka yang ditampilkan.

SPESIFIKASI

Sumber Daya: Sel matahari dan baterai alkalin (LR44 x 1)
 Suhu Operasi: 0°C to 40°C
 Dimensi: 103mm(L) x 135mm (W) x 32mm (H)
 Berat: 102g
 (Dapat berubah tanpa pemberitahuan)