




E-IM-2914

INSTRUCTIONS  
EN  
INSTRUCCIONES  
ES

ENGLISH

## BEFORE STARTING

- Read all instructions before use.
- Plug in AC power cord. (Figure (a))
- Turn power switch on. (Power switch is located on the right side of the cabinet.) "C" will automatically be printed on the paper tape if the switch is set to "PRINT". (Figure (b))
- Remove the tape on the ink ribbon of the calculator. (Figure (c), (d))

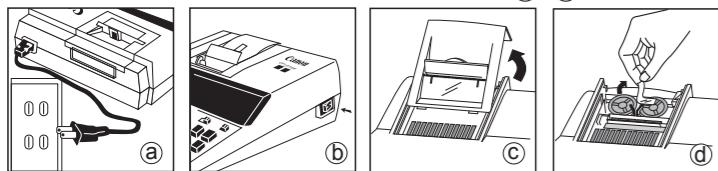


## GENERAL MAINTENANCE

- Do not use or leave the calculator under direct sunlight. Areas subject to rapid temperature changes, high humidity, dust and dirt should also be avoided.
- Use a dry cloth to clean the casing of the unit. Do not use water or detergents.
- Only use the printer when the paper roll is loaded.
- Avoid using the calculator in places where there are iron filings, as this may affect the electrical circuits of the calculator.
- Do not place anything on top of the machine, particularly on top of the printer mechanism.
- Turn the calculator off before removing the plug from the electrical outlet.
- In case of electrical fault (i.e. smoke), disconnect the plug from the electrical socket-outlet immediately. The socket-outlet should be installed near the equipment and should be easily accessible.

## INSTALLING PRINTING PAPER

- 1 Lift up paper arm. (Figure (1))  
• When inserting the paper, cut the edge of the paper as shown.
- 2 Place the new paper roll on the arm. The edge of the paper should be positioned as shown. (Figure (2))  
• Suitable paper roll - Width: 57mm (2-1/4") / Diameter: 86mm (3-3/8") max.
- 3 Insert the paper into the slot of the machine as indicated. (Figure (3))
- 4 Turn the power switch on. Press the paper feed key **FEED** to advance the paper as shown. (Figure (4))

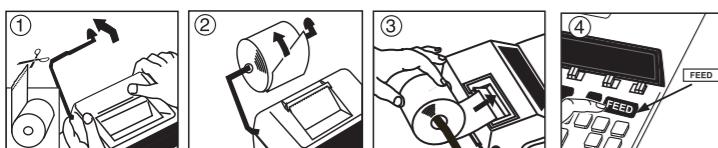

## REPLACING THE INK RIBBON

- Note: Turn the power switch off.
- 1 Lift the tab on the back-side of the printer cover, and then remove the cover. (Figure (5))
  - 2 While pinching the ribbon lock (A) in the direction of the arrow, lift ribbon spools off the shafts. Discard the old ribbon and spools. (Figure (6))
  - 3 Separate the spools of new ribbon between the tape and printer head. Guide it around the four positions of the ribbon guide (B) and place the spools on the shafts. (Figure (7))
  - 4 When the ribbon spools are settled, release the ribbon locks. If necessary, rotate the spools until the pegs on the bottom of the spool seat themselves in the holes of the spool holder. (Figure (8))
  - 5 Rotate either spool to take up any ribbon slack, making sure that the ribbon is positioned around the four ribbon guides. Replace the printer cover. (Figure (9))

IMPORTANT: Use only the same type of ribbon spools.



## DECIMAL POINT SELECTOR SWITCH

- |                   |  |
|-------------------|--|
| DECIMAL           | .....  |
| F 6 4 3 2 1 0 1 2 | - Used for designating the decimal point position (6, 4, 3, 2, 1, 0) for calculated results. |
- +1, +2 (Add Mode) – Addition and subtraction (+1) or multiplication (+2) functions are performed with an automatic 2-digit decimal. It is convenient for currency calculation.
- F (Floating Decimal point) – All effective numbers up to 12 digits are printed or displayed.

## ROUNDING SWITCH

## ROUNDING

– Used to round-up [ $\uparrow$ ], round-off [5/4], or round-down [ $\downarrow$ ] to the pre-selected decimal digits in the result.



## PRINT / PAIR MODE CALCULATION SWITCH



## PRINT

PRINT OFF

PRINT ON

PAIR

OFF PRINT PAIR

PRINT

OFF PRINT PAIR

ITEM

OFF

n+ n-/

AVE

ITEM&lt;/div

## Calculation Examples / Ejemplos de cálculo

**EN** If switches below do not match the example, please set switches as shown.  
**ES** Si los interruptores siguientes no son mostrados como en la explicación, póngalos como sigue a continuación.

## Key Switches / Boutons des Touches



Calculation	Operation
$6 \times 9 \div 3 + 2 - 5 = 15$	C 6 x 9 ÷ 3 = 18.00 * 18.00 + 2.00 + 5.00 - 15.00 * 2.00 - 2.00 -x 3. = 6.00 -*
$-2 \times 3 = -6$	6 x 9 ÷ 3 = + 2 + 5 - * 15.00 * 2.00 - 2.00 -x 3. = 6.00 -*
	C 6 x 9 ÷ 3 = 18.00 * 18.00 + 2.00 + 5.00 - 15.00 * 2.00 - 2.00 -x 3. = 6.00 -*
	C 6 x 9 ÷ 3 = 18.00 * 18.00 + 2.00 + 5.00 - 15.00 * 2.00 - 2.00 -x 3. = 6.00 -*

## Correction / Corrección

$123 + 546 \text{ (456)} = 579$	123 + 546 CE 456 *	123.00 + 456.00 + 579.00 *
$123 + 765 \text{ (456)} = 579$	123 + 765 + 456 - 579.00 *	123.00 + 765.00 + 456.00 + 579.00 *
$123 + 455 \text{ (6)} = 579$	123 + 455 → 6 + 579.00 *	123.00 + 456.00 + 579.00 *

## Square Root / Raíz Cuadrada

$\sqrt{3} = 1.73205080756$	3 ✓	3. S + 1.73205080756
----------------------------	-----	-------------------------

## Constant Calculation / Cálculo de Constante

**K** **EN** Set the switch to "K" for performing multiplication and division by a constant.  
**ES** Coloque el interruptor en "K" para realizar multiplicación y división por una constante.

$300 \times 21 = 6,300$	( K ) 300 X 21 *	300. x 21. = 6,300.00 *
$300 \times 43 = 12,900$	43 *	6,300.00 *
$31,750 \div 50 = 635$	50 *	43. = 12,900.00 *
$54,236 \div 50 = 1,084.72$	54236 *	

## Reciprocal Calculation / Cálculo Recíproco

$1/7=0.14285714285$	( DECIMAL ) 7 *	7. ÷ 7. = 1.000 * 1.000 = 0.143 *
---------------------	-----------------	---

## Add Mode / Modo Sumar

\$12.55+\$15.75-\$5.30 =\$23.00	DECIMAL ( F643210-1-2 ) 1255 + ( K ) 1575 + 530 - 5.30 - 23.00 *	12.55 + 15.75 + 28.30 ◊ 5.30 - 23.00 *
$200 \times \$0.04=\$8$ (Item of number)	DECIMAL ( F643210-1-2 ) 200 X 4 *	200. x 0.04 = 8.00 *

## Print Out

8 ÷ 3 × 7 + 9 = 18.86666666666	DECIMAL ( F643210-1-2 ) 8 ÷ 3 X 7 *	8. ÷ 3. x 3.7 = 9.866666666664 * 9.866666666664 + 9. + 18.86666666666 *
$28 \div 3 = 9.33333333333$	DECIMAL ( F643210-1-2 ) 28 ÷ 3 *	28. ÷ 3. = 9.34 *

## Round-up / Redondeo por Exceso

11 ÷ 3 = 3.66666666666	ROUNDING ( Rounding ) 11 ÷ 3 *	11. ÷ 3. = 3.67 *
------------------------	-----------------------------------	-------------------------

## Round-off / Redondeo

11 ÷ 3 = 3.66666666666	ROUNDING ( Rounding ) 11 ÷ 3 *	11. ÷ 3. = 3.67 *
------------------------	-----------------------------------	-------------------------

11 ÷ 3 = 3.66666666666	ROUNDING ( Rounding ) 11 ÷ 3 *	11. ÷ 3. = 3.66 *
------------------------	-----------------------------------	-------------------------

## Item Count / Cuenta de Artículo

1,860 ... 1) 1,420 ... 2) + 2,380 ... 3) 5,660	ITEM ( OFF n+n- AVE ) 1860 + 1420 + 2380 + 5,660	1,860.00 + 1,420.00 + 2,380.00 + 5,660.00 *
1,860 ... 1) 1,430 ... 1,420 ... 2) + 2,380 ... 3) 5,660	ITEM ( OFF n+n- AVE ) 1860 + 1430 + 1420 + 2380 + 5,660	1,860.00 + 1,430.00 + 1,420.00 + 2,380.00 + 5,660.00 *

## Recall Item Count & Item Plus Calculation / Conteo de Elemento de Recuperación y Calculo Suma de Elemento

**R1** **EN** Recalls and prints the number of items. An entered number can be added to the Item Counter with the **R1** key.

**ES** Recupera e imprime el número de elementos. Un número ingresado puede ser añadido al Contador de elementos con la tecla **R1**.

Quantity	Amount (\$)	( ITEM ) 5 R1 13 R1 4 R1 6019 + 2450 + 25 R1 3620 + 12 R1 2519 - 7 R1	0005 1,350.00 + 0013 5,430.00 + 0004 6,019.00 + 0022 12,799.00 *
5	1,350		
13	5,430		
4	6,019		
22	12,799		

Quantity	Amount (\$)	( ITEM ) 7 R1 25 R1 3620 + 12 R1 2519 - 12 R1	0007 2,450.00 + 0025 3,620.00 + 0012 2,519.00 - 0044 3,551.00 *
7	2,450		
25	3,620		
12	(-2,519)		
44	3,551		

## Average Calculation / Cálculo Promedio

1,520+1,460+1,390=4,370	ITEM ( OFF n+n- AVE ) 1520 + 1460 + 1390 + 0003	1,520.00 + 1,460.00 + 1,390.00 + 4,370.00 *
$4,370 \div 3 = (1,456.67)$		1,456.67 A

## Delta Percent Calculation / Cálculos de Delta Porcentaje

This year sales \$18,000 Last year sales \$15,000 Increased ratio = ? (20%)	ITEM ( OFF n+n- AVE ) 18000 X 15000 △%	18,000. x 15,000. = 3,000. %
---	---	------------------------------------

## Reverse / Inversión de factores

$10 \div 5 = 2$ $5 \div 10 = 0.5$	10 ÷ 5 RV 5 ÷ 10	10. ÷ 5. R 10. = 0.50 *
--------------------------------------	---------------------	----------------------------------

## Percentage Calculation / Cálculo de Porcentaje</h