



www.canon.com/calcmannual

P23-DHV



E-IM-309

INSTRUCTIONS EN
INSTRUCCIONES ES

ENGLISH

IMPORTANT: READ BEFORE USE

Please read the following instructions and safety precautions before using the calculator.

Keep this sheet on hand for future reference.

CAUTION AND GENERAL MAINTENANCE

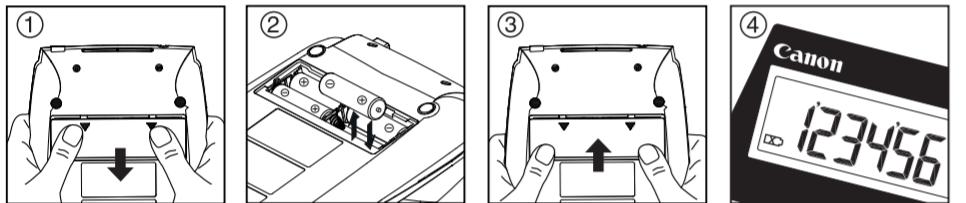
- Do not use or leave the calculator under direct sunlight. Areas subject to rapid temperature changes, high humidity, dust and dirt should also be avoided.
- Use a dry cloth to clean the casing of the unit. Do not use water or detergents.
- Only use the printer when the paper roll is loaded.
- Avoid using the calculator in places where there are iron filings, as this may affect the electrical circuits of the calculator.
- Do not place anything on top of the machine, particularly on top of the printer mechanism.
- Turn the calculator off before removing the plug from the electrical outlet.
- In case of electrical fault (i.e. smoke), disconnect the plug from the electrical outlet immediately. The outlet should be installed near the equipment and should be easily accessible.

LOADING AND REPLACING BATTERIES**LOADING**

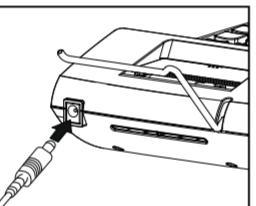
- Remove the battery cover by sliding in the direction of the arrow. (Figure ①)
- Load 4 new AA batteries as illustrated. (Figure ②)
- Replace the cover (Figure ③).

REPLACEMENT

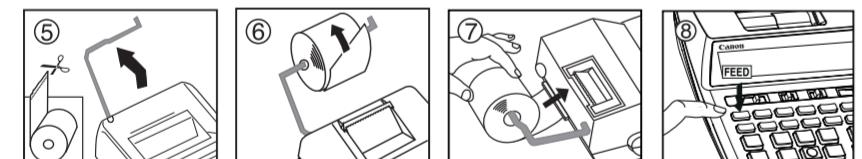
- Low battery power may cause printing problems or random paper advances. It can also disable the **ON/OFF** key.
- If the display is dim or the printing speed decreases or the "X" icon appears (Figure ④), then the batteries may need to be replaced. Replace batteries to resume normal operations.
- Remove the batteries if you do not plan to use the unit for a long period of time.

**AC OPERATION****CANON AC ADAPTER AD-38 II / AC-380 III (OPTIONAL)**

- Use only the Canon AC Adapter AD-38 II / AC-380 III.
- Turn the power switch to OFF before connecting or disconnecting the AC Adapter.
- To purchase optional AC Adapter, please visit <http://www.estore.usa.canon.com>. When plugging the AC Adapter during the "ON" mode.
- Press **ON/OFF** key to restart the calculator.
- Remove the adapter plug fully from the power inlet, if batteries are already in use for operation.

**INSTALLING PRINTING PAPER**

- Lift up the paper arm (Figure ⑤).
- When inserting the paper, cut the edge of the paper as shown.
- Place the new paper roll on the arm. The edge of the paper should be positioned as shown (Figure ⑥).
- Insert the paper into the slit at the back of the machine as indicated. (Figure ⑦)
- Turn the calculator on. Press the paper feed key [**FEED**] to advance the paper (Figure ⑧).

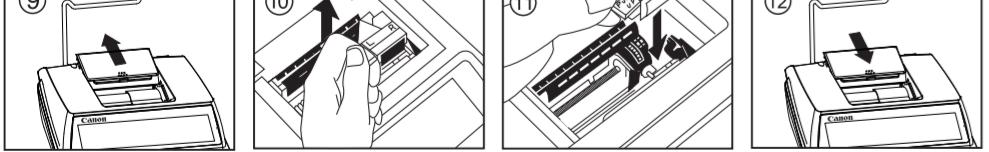
**REPLACING THE INK ROLLER (CP-13)**

Note: Turn power switch off.

- Remove the printer cover. (Figure ⑨)
- Hold the left side of the ink roller indicated as "pull up" and lift the ink roller up to remove it. (Figure ⑩)
 - To maintain clear printing, change the ink roller after about 8 rolls of printing paper have been used.
- Insert a new ink roller. (Figure ⑪)
- Replace the printer cover. (Figure ⑫)

CAUTION: The edge of the paper cutter may be sharp, please handle with care!

- Use only the Ink Roller CP-13
- Do not attempt to refill the ink roller, since this may cause mechanical difficulties.

**DECIMAL POINT SELECTOR SWITCH**

Used for designating the decimal point position (0, 1, 2, 3, 4) for calculated results.

+ (Add-Mode) – Addition and subtraction functions are performed with an automatic 2-digit decimal. It is convenient for currency calculations.

F (Floating Decimal Point) – All effective numbers up to 12 digits are printed or displayed.

ROUNDING SWITCHUsed for round-up [**↑**], round-off [5/4], or round-down [**↓**] to the pre-selected decimal digits in the result.**GRAND TOTAL / RATE SET SWITCH****GRAND TOTAL**

When the calculations are performed with the GT switch set to "ON", the totals are accumulated in the grand total memory. Each time [**X**] is pressed, the subtotal number is printed with the symbols G+. When **GT** is pressed, the intermediate grand total is printed with the symbols G>. Press **GT** successively to get the grand total followed by the symbols G*.

RATE SET

Set switch to "RATE SET" for setting or recalling the tax and currency rate.

POWER ON/OFF / PRINT ON / ITEM COUNT / CURRENCY CONVERSION SELECTION SWITCH

Turns calculator Off.



Turns calculator On. Entries and results will appear on the display, but will not be printed out.



Entries and results will appear on the display and will be printed out.



Set the switch to "ITEM" to print the number of times the **[+]** and **[=]** keys have been pressed (up to 999). The item count will be printed on the left hand side of the paper roll when the **[#]**, **[X]**, **[MC]** or **[MX]** keys are pressed.



Set the switch to "CONV" position to perform currency conversion calculation functions. Entries and result will appear on the display and printout.

OVERFLOW FUNCTIONPress **CE** to clear the overflow if the following cases occur:

- When "E" is displayed
- A dotted line is printed and keyboard is electronically locked
- Further operation is impossible

The overflow occurs when:

- The result or the memory content exceeds 12 digits to the left of the decimal point.
- Dividing by "0".
- The sequential operation speed is faster than the calculation processing speed. (Buffer Register Overflow)



Electromagnetic interference or electrostatic discharge may cause the display to malfunction or the contents of the memory to be lost or altered. Should this occur, use the tip of a ball point pen (or similar sharp object) to press the [RESET] button at the back of the calculator. After resetting, be sure to set the calendar, clock, tax and currency rate again.

**SPECIFICATIONS**

Model name: P23-DHV-3

Operation temperature: 0°C to 40°C (32°F to 104°F)

Automatic Power-off: approx. 7 minutes

Dimensions: 230mm (L) x 163mm (W) x 56mm (H) / 9-1/16" x 6-27/64" x 2-13/64"

Weight: 472 g (16 oz) with batteries / 403 g (14 oz) without batteries

(Subject to change without notice)

CANON CONSUMER CALCULATOR LIMITED WARRANTY

The limited warranty set forth below is given by Canon U.S.A., Inc. (Canon U.S.A.) with respect to Calculators purchased and used in the United States respectively.

This limited warranty is only effective upon presentation of proof of purchase (bill of sale) to Canon U.S.A. Factory Service Center. Canon Calculators, when delivered to you in a new condition in the original container, are warranted against defective materials or workmanship as follows: for a period of one (1) year from the date of original purchase, defective parts or Calculators returned to a Canon U.S.A. Factory Service Center and proven to be defective upon inspection, will be exchanged at Canon U.S.A.'s sole option, for new or comparable rebuilt parts or calculators (of the same or similar model). Warranty for replacement shall not extend the original warranty period of the defective calculator.

When returning Calculators under this limited warranty, you must pre-pay the shipping charges, if any, and enclose a complete explanation of the problem. Calculators covered by this limited warranty will be repaired at Canon U.S.A.'s sole option, and returned to you without charge by any Canon U.S.A. Service Center. This warranty does not cover rechargeable batteries that may be supplied with the calculator, as to which batteries there shall be no warranty or replacement.

Information Technology Services Center will refer you to the nearest Factory Service Center. Repairs not under warranty will be at such cost as Canon U.S.A. may from time to time generally establish.

This limited warranty covers all defects encountered in normal use of the calculators, and does not apply in the following cases:

- Loss or damage to the Calculators due to abuse, mishandling, alteration, accident, electrical current fluctuations, failure to follow operating instructions, maintenance and environmental instructions prescribed in Canon U.S.A.'s instruction manual or service performed by other than a Canon U.S.A. Factory Service Center.
- Damage to any part of that model which damage the Calculator or cause abnormally frequent service calls or service problems.
- If any Calculator has had its serial numbers or dating altered or removed.

(d) Loss or damage to the Calculator due to leaking batteries (other than rechargeable batteries supplied as original equipment with the Calculator) or Canon U.S.A. or water damage.

NO IMPLIED WARRANTY (OR CONDITION) INCLUDING ANY IMPLIED WARRANTY (OR CONDITION) OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE APPLIES TO THE CALCULATORS AFTER THE APPLICABLE PERIOD OF EXPRESS WARRANTY STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY EXCEPT AS MENTIONED ABOVE, GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THE CALCULATORS SHALL BIND CANON U.S.A. (SOME STATES OR PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU) NEITHER CANON U.S.A. SHALL BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR FOR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE CALCULATOR, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF CANON U.S.A. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY DAMAGES AGAINST CANON U.S.A. BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE CALCULATOR SOLD BY CANON U.S.A. IN CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, CANON ASSUME ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OWNERS AND THEIR PROPERTY ARISING OUT OF USE, MISUSE OR INABILITY TO USE ANY CALCULATOR SOLD BY CANON U.S.A. OR CANON CANADA NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF CANON U.S.A. OR CANON CANADA. (SOME STATES OR PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU) THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF ANY CALCULATOR OR THE PERSON FOR WHOM IT WAS PURCHASED AS A GIFT AND STATES YOUR EXCLUSIVE REMEDY.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

One Canon Park, Melville, NY 11747

One Canon Park, Melville, NY 11747

Customer Relations Division

1-800-828-4040

Canon Information Technology Services in the United States

For all general inquiries, operational assistance, accessory orders or for the location of the nearest service facility for this product in the United States, please contact:

Canon U.S.A., Inc.
One Canon Park, Melville, NY 11747

Customer Relations Division

1-800-828-4040

Please keep a copy of your original bill of sale. In order to obtain warranty service, you will need to present a copy of your original bill of sale from your Consumer Calculator retailer at the time of service.

Also please keep all packing materials and the original packing box to protect your equipment, should you need to transport it for service.

FCC REGULATIONS

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

• Recorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

• Recorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

• Recorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

• Recorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

• Recorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

• Recorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

Do not make any changes or modifications to the equipment unless otherwise

Clock & calendar function / Función del reloj del calendario

SETTING / AJUSTE: DECIMAL ROUNDING GT OFF ON CONV PRINT ITEM

- Used to switch between clock or calendar mode.
 - Serve para cambiar entre los modos de reloj y calendario.
 - Used to switch between 12 or 24 hour at clock mode time setting.
 - Serve para cambiar entre 12 o 24 horas en el ajuste horario del modo de reloj.
 - Used to set the date and time in calendar & clock mode.
 - Serve para fijar la fecha y la hora en los modos de reloj y calendario.
 - Used to switch between AM or PM at clock mode time setting.
 - Serve para cambiar entre AM o PM en el ajuste horario del modo de reloj.
 - Used to select date format between "YYYY/MM/DD", "DD/MM/YYYY" or "MM/DD/YYYY" at calendar mode.
 - Serve para seleccionar el formato de fecha entre "AAAA/MM/DD", "DD/MM/AAAA" o "MM/DD/AAAA" en el modo de calendario.
- Note: The calendar, clock, tax, and currency rate will clear if all power sources are disconnected.
In this case, please reset the settings.
Nota: Si todas las fuentes de energía están desconectadas, el calendario, reloj, impuesto y tasa de cambio serán borrados. En este caso, por favor configure otra vez el calendario, reloj, impuesto y tasa de cambio.

Date Setting / Ajuste de la Fecha (Example / Ejemplo: June 19 2017)

Operation / Operación	Display / Exponer	Print Out / Imprimir
	01-01-2016	***01-01-2016***
(Hold 3 second / Sostenga 3 segundo)	01-01-2016	***06-19-2017***
0 6 1 9 2 0 1 7	06-19-2017	
CE (Return to calculation mode / Vuelva al modo de cálculo)	0.	C

Time Setting / Ajuste de la Hora (Example / Ejemplo: 3 : 18 pm)

Operation / Operación	Display / Exponer	Print Out / Imprimir
(On Calculation Mode / El modo de cálculo)	AM 12-00-18	***06-19-2017***
(Hold 3 second / Sostenga 3 segundo)	AM 12-00	*****12-00*****
0 3 1 8 AM/PM	PM 03-18-00	*****03-18*****
CE (Return to calculation mode / Vuelva al modo de cálculo)	0.	C

Calculation examples / Ejemplos de cálculo

SETTING / AJUSTE: DECIMAL ROUNDING GT OFF ON CONV PRINT ITEM

- If the settings do not match the example below, please adjust the switch as shown.
- Si los commutadores siguientes no son mostrados como en la explicación, póngalos como sigue a continuación.

Calculation / Cálculo	Operation / Operación	Print Out / Imprimir
2+(3x4)-5=9	2 + 3 x 4 = 5 GT	0. C 2.00 + 3. x 4. = 12.00 * 5.00 - 9.00 *
-2x3=-6	-2 x 3 =	-2. x 3. = -6.00 *
3 ³ =27	3 x	3. x 3. = 9.00 *
1/7=0.14285714285	DECIMAL 7	27.00 * 7. ÷ 1. = 0.000 *
\$12.55+\$15.75-\$5.30 =\$23.00	DECIMAL 1255 + 1575 - 530 =	0. C 12.55 + 15.75 + 5.30 - 23.00 *
8÷3x3.7+9=18.86666666666	DECIMAL 8 ÷ 3 x 3.7 =	8. ÷ 3. x 3.7 = 9.86666666664 *
123x 756 (456)=56,088	DECIMAL 123 x 756 (456) =	123. x 456. = 56,088.00 *
123x 455 (6)=56,088	123 x 455 (6) =	123. x 456. = 56,088.00 *

Data Printout / Impresión de los Datos

Calculation / Cálculo	Operation / Operación	Print Out / Imprimir
June 19 2017	6 19 2017 #0	#6•19•2017-----
1,860	1860 +	1,860.00 +
1,420	1420 +	1,420.00 +
June 20 2017	6 20 2017 #0	#6•20•2017-----
2,380	2380 +	2,380.00 +
+)	2,200 +	2,200.00 +
	7,860.00 *	7,860.00 *

Round-down / Redondear Hacia Abajo

Calculation / Cálculo	Operation / Operación	Print Out / Imprimir
11÷3=3.66666666666	ROUNDING (5/4) 11 3 =	11. ÷ 3. = 3.66 *

Round-up / Redondeo por Exceso

Calculation / Cálculo	Operation / Operación	Print Out / Imprimir
28÷3=9.3333333333	ROUNDING (5/4) 28 3 =	28. ÷ 3. = 9.34 *

Round-off / Redondeo

Calculation / Cálculo	Operation / Operación	Print Out / Imprimir
11÷3=3.66666666666	ROUNDING (5/4) 11 3 =	11. ÷ 3. = 3.67 *

Currency Conversion Calculation / Cálculo de Conversión de Moneda

OFF ON CONV PRINT ITEM	Set the switch to "CONV" positon to perform currency conversion calculation functions. Entries and result will appear on the display and printout.
GT	Set the switch to "GT" and enter the currency conversion rate and press $\square C_1$, $\square C_2$ or $\square C_3$ to store the currency rate.
OFF ON RATE SET	Press $\square C_1$, $\square C_2$ or $\square C_3$ to recall the stored currency conversion rate.
PRINT ITEM	Press $\square C_1$ to convert currency figure displayed from $\square C_1$, $\square C_2$ or $\square C_3$ to the $\square C_1$.
	Press $\square C_1$, $\square C_2$ or $\square C_3$ to convert displayed figure from $\square C_1$ to $\square C_1$, $\square C_2$ or $\square C_3$.

Coloque el comutador en la posición "CONV" para efectuar el cálculo de conversión de divisa. Las entradas y el resultado aparecerán en la pantalla y se imprimirán.

- Coloque el comutador en la posición "OFF ON RATE SET" y entonces entra en el índice de conversión de modernidad y la prensa $\square C_1$, $\square C_2$ o $\square C_3$ para almacenar la tarifa.
- Presione $\square C_1$, $\square C_2$ o $\square C_3$ para llamar la tasa de conversión de divisa en memoria.
- Presione $\square C_1$ para convertir la cifra de divisa que se visualiza de $\square C_1$, $\square C_2$ o $\square C_3$ a $\square C_1$.
- Presione $\square C_1$, $\square C_2$ o $\square C_3$ para convertir la cifra que se visualiza de $\square C_1$ a $\square C_1$, $\square C_2$ o $\square C_3$.

Cost-Sell-Margin Calculation / Cálculo de Costos-Ventas-Margen

COST SELL MARGIN	Used for calculating the cost, selling price and profit margin amount. Enter the value of any 2 items to obtain the balance value item. (e.g. enter the value of the cost and the selling price to obtain the profit margin %.)
	■ Se utiliza para calcular el costo, el precio de venta y el porcentaje del margen. Introduzca el valor de dos de estas tres variables para obtener el resultado del balance correspondiente. (Por ejemplo, introduzca el valor del costo y del precio de venta para obtener el margen de beneficio %).

Calculation / Cálculo	Operation / Operación	Print Out / Imprimir
Calculating Cost/Calcular el costo	(GT) 2000 SELL 30 MARGIN	2,000. **X 30. M% 1,400. CC 30. M% 600. MA

Calculating Selling Price/Calcular el precio de venta

Calculation / Cálculo	Operation / Operación	Print Out / Imprimir
Cost/Costo : \$1,500	(GT) 1500 COST 20 MARGIN	1,500. CC 20. M% 1,875. MA 20. M% 375.00

Calculating Profit Margin/Calcular el porcentaje de margen

Calculation / Cálculo	Operation / Operación	Print Out / Imprimir
Cost/Costo : \$1,500	(GT) 1500 COST 2000 SELL	1,500. CC 2,000. **X 25.00 M% 500.00 MA

Double Check Function / Función de Double Chequeo

SETTING / AJUSTE:	DECIMAL ROUNDING GT OFF ON CONV PRINT ITEM
	After switching the settings to "Decimal", "Rounding" and "GT", please keep the same settings in the process of Double Check Function in order to ensure accurate double checking results.

Después de seleccionar la opción de "Decimal", "Redondeo" y "GT", por favor conserve la misma opción en el proceso de Función de Doble Chequeo con objeto de obtener un resultado de verificación preciso.

MODE	Used to start the Check record process. "CHE" will appear on the display.
	■ Se usa para iniciar el proceso de chequeo de grabación. "CHE" aparecerá en la pantalla.

START CHECK	Used to start a Check process. The Check process compares the user input with the previous recorded operation queue. "CHE Start" will appear on the display.
	■ Se usa para iniciar un proceso de chequeo. El proceso de chequeo compara la entrada del usuario con la cola de operación grabada previamente. "CHE Start" aparecerá en la pantalla.

Calculation / Cálculo	Operation / Operación	Print Out / Imprimir
400+280-78=602	MODE	0. C*
</td		